


Forward Roll - Reverse

The fabric will roll forwards coming off the tube further away from the window.

This roll is suitable for blackout and sunfilter fabrics.

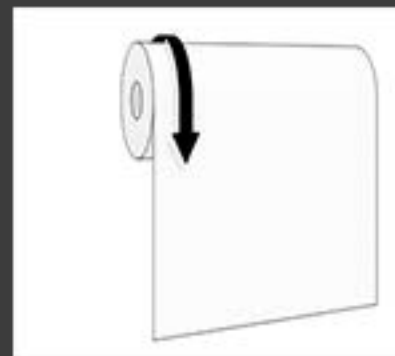

Thermal Coated Fabrics
must be rolled forwards.